

PROVIDED:



TOOLS YOU MAY NEED:



NOTES:



OAKSTORE
HAND CRAFTED OAK FURNITURE

Oak Store Direct
Units 4-6
Station Road, Shipley
West Yorkshire, BD18 2JL

sales@oakstoredirect.com
www.oakstoredirect.com



OAKSTORE
HAND CRAFTED OAK FURNITURE



12mm
Support

INSTALLATION GUIDE
STANDARD SHELF FIXINGS



1

Use the spirit level to mark a level line at the required point of installation.



2

Use the tape measure and measure across all the hole centres



3

Transfer measurements across to the line on the wall for each centre point.



4

Use a masonry drill to drill first with 6/7 mm and finish with a 10mm bit. Drill to a depth of 70mm max.



5

Insert the 10mm rawl plugs provided and if required use the hammer to ensure the plugs are flush.




6

Use a cordless drill to drive in the 12 mm shelf support all the way leaving just enough for some adjustment.



7

If you have no cordless drill then use a spanner to wind in the shelf support.

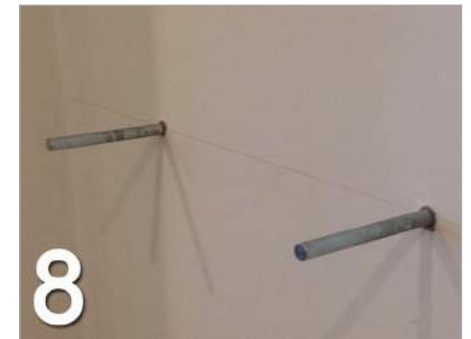

8

Place a spirit level across each of the supports once installed and check all for level and 90 degrees.



9

Take the shelf and gently add to each shelf support until half way on, make small adjustments if required.



10

Using the spirit level and spanner (or pipe grips) gently rotate the shelf support left/right until level.



11

Gently push the shelf back firmly to the wall.



12

Final check with the spirit level, repeat if necessary.